


Dedicated Ultra Aire Return to HVAC Return

Create a separate return for the Ultra Aire Dehumidifier in a central area of the building.


Installing the supply air from the Ultra Aire Dehumidifier to the return of the HVAC system requires the HVAC fan to run when the Ultra Aire Dehumidifier is operating.

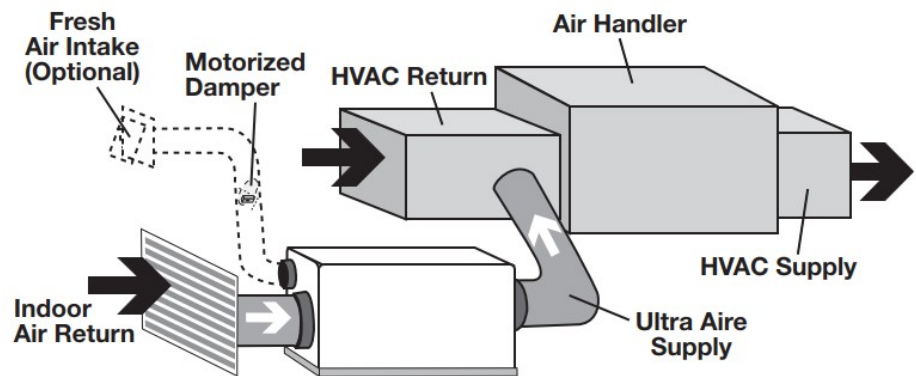

HVAC Return to HVAC Supply

Check Damper should be in place between the Return and Supply connections of the dehumidifier.

If Check Damper is not in place, the HVAC fan must turn on when the dehumidifier is in operation.

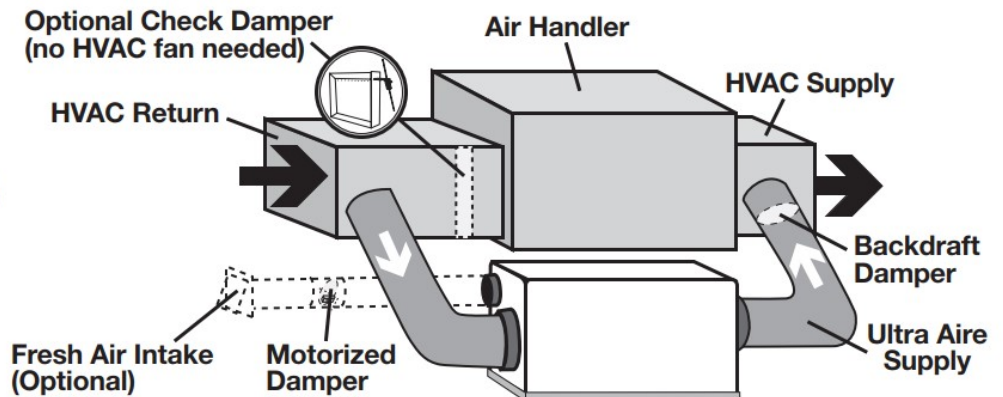

HVAC Return to HVAC Return

Check Damper should be in place between the Return and Supply connections of the dehumidifier.

If Check Damper is not in place, the HVAC fan must turn on when the dehumidifier is in operation.

